

INDUCTION CASTING MACHINE EC-1 / EC-1 Infrared / EC-2

 **USER MANUAL**



TABLE OF CONTENTS

1.	GETTING STARTED GUIDE.....	4
1.1	SAFETY INSTRUCTION.....	4
1.1.1	IMPORTANT NOTES.....	4
1.1.2	SAFETY WARNINGS.....	5
1.2	GENERAL INFORMATION.....	7
1.2.1	RECOMMENDED USE.....	7
1.2.2	SUPPLIED ACCESSORIES.....	7
1.2.3	UNAUTHORISED USE.....	8
1.2.4	PERSONNEL TRAINING.....	8
1.2.5	SAFETY DEVICES.....	8
1.2.6	NOISE LEVEL.....	8
1.2.7	RESIDUAL DANGER AND EMERGENCY SITUATION.....	8
2.	INFORMATION ON THE MACHINE OPERATION.....	9
2.1	TECHNICAL DESCRIPTION OF THE MACHINE.....	9
2.1.1	TECHNICAL DATA.....	9
2.1.2	TECHNICAL REFERENCE REGULATIONS AND TEST PROCEDURES.....	10
2.1.3	IDENTIFICATION OF THE CENTRIFUGATION TANK COMPONENTS.....	10
2.2	CONTROLS AND OPERATION.....	11
2.2.1	FRONT PANEL OVERVIEW.....	11
2.2.2	CONTROL PANEL OVERVIEW.....	13
2.2.3	INDICATORS.....	13
2.2.4	OUTPUT REGULATION AND STATUS MESSAGES.....	14
2.2.5	MENUS AND NAVIGATION.....	15
2.2.6	TUNING AND TROUBLESHOOTING.....	21
2.3	INSTALLATION AND SET-UP.....	23
2.3.1	UNPACKING THE MACHINE.....	23
2.3.2	POSITIONING IN THE ROOM.....	24
2.3.3	MAIN CONNECTIONS.....	24
2.3.4	INBUILT COOLING CIRCUIT.....	25
2.3.5	PRELIMINARY CONTROLS.....	26
2.4	OPERATING INSTRUCTIONS.....	27
2.4.1	CRUCIBLES.....	27
2.4.2	MELTING AND CENTRIFUGATION PREPARATION.....	28
2.4.3	CENTRIFUGAL ARM AND CRUCIBLE PREPARATION.....	29
2.4.4	MELTING.....	30
2.4.5	VACUUM MELTING (only for EC-2).....	30
2.4.6	INERT GAS INTRODUCTION (only for EC-2 with argon module).....	30
2.4.7	CENTRIFUGATION.....	31
3.	INFORMATION ON MAINTENANCE AND REPAIR.....	32
3.1	MAINTENANCE.....	32
3.2	ACCIDENT PREVENTION PROTECTIONS.....	32
3.3	SERVICE.....	33
3.3.1	GENERAL.....	33
3.3.2	SERVICE CONTACT INFORMATION.....	33
3.4	SPARE PARTS LIST.....	34

1. GETTING STARTED GUIDE

1.1 SAFETY INSTRUCTION

1.1.1 IMPORTANT NOTES

- This operator's manual is addressed to the owner, for a correct installation, use and maintenance of the machine.
- The operator's manual contains useful information to specify the recommended use of the machine according to the project hypotheses and technical features, to supply instructions for the installation, assembly, regulation and use, personnel training, to direct the maintenance intervention and to supply information on residual risks.
- It also supplies complete information on all models and all additional modules of the EC series melting units; you are therefore advised to refer to all the paragraphs concerning the model(s) in your possession.
- For a professional use of the machine, this manual can never replace the operator's specific experience, however it supplies all the information required for a correct installation and is a useful reminder of the main basic operations.
- This manual is an integral part of the machine and should be "kept for future reference" until the final disassembly of the machine. Therefore, its consultation should be allowed near the machine and it should be kept with due care (protected, in a dry place, away from sun rays or atmospheric agents, etc.). In case of loss or damage, you can request a new copy from our dealers, technical service centres or directly from Ultraflex Power Technologies or Dentalfarm.
- This manual reflects the state-of-the-art at the moment of the machine commercialisation, and cannot be considered inappropriate only because it has been subsequently amended on the basis of new experiences.
- In this document period "." will be used as a decimal point delimiter.
- The manufacturer reserves himself the right to amend or update his own production and relative manuals, without being obliged to update previous productions, unless in exceptional cases.
- You can request further details or updates to this manual from our dealers, technical service centres or directly from Ultraflex Power Technologies and Dentalfarm.
- Any criticism or suggestion aimed at improving the machine can be sent in writing to our office. We will be pleased to read them and send our comments to the persons concerned.

1.1.2 SAFETY WARNINGS

To guarantee the utmost operating reliability, Ultraflex Power Technologies and Dentalfarm have carried out an accurate selection of materials and components to be used in the machine manufacture. The machine has undergone regular checks before being delivered. The machine's productivity over the years also depends on its correct use and an appropriate preventive maintenance according to the instructions contained in this manual.

All manufacturing elements, connecting components and controls, have been designed and made with such a safety level that they can resist abnormal strains or strains higher than those specified in this manual. The materials are of the best quality and their acceptance, storage and use in the workshop are continuously controlled in order to guarantee the absence of damage, wear and tear, faulty operation.

In any event, respect the following measures:

- **Never use the machine or carry out any intervention on the machine if you have not carefully read and wholly understood this manual in all its parts. In particular, take all the necessary measures listed in section 1 - SAFETY INSTRUCTIONS AND INFORMATION.**
- **It s forbidden to use the machine in conditions or for a use other than that stated in the manual, and Utraflex Power Technologies and Dentalfarm will not be deemed responsible for any failure, fault or accident due to the non observance of this prohibition.**

This manual is made up of three parts:

SECTION 1: deals with the SAFETY INSTRUCTIONS AND INFORMATION

SECTION 2: illustrates the MACHINE CHARACTERISTICS - OPERATION - TRANSPORT - AUXILIARY EQUIPMENT ASSEMBLY – EQUIPMENT SHUTDOWN - CIRCUIT DIAGRAMS.

SECTION 3: deals with the MAINTENANCE INTERVENTIONS, LUBRICATION and includes the SPARE PARTS LIST AND DESCRIPTION.

NOTE: IT IS FORBIDDEN TO TAMPER WITH, ALTER OR CHANGE, EVEN PARTIALLY, THE MACHINE OR EQUIPMENT REFERRED TO IN THIS OPERATOR'S MANUAL, AND IN PARTICULAR THE GUARDS FITTED FOR THE PERSONS' SAFETY.

IT IS ALSO FORBIDDEN TO OPERATE IN A WAY OTHER THAN THE SPECIFIED WAY, OR TO NEGLECT SAFETY RELATED OPERATIONS.

Operations, for which the non-observance of the instructions can lead to damages to the machine or other parts related to the machine or to the surrounding environment, will be indicated in the manual by this sign



Operations for which the non-observance of the instructions or the tampering with the equipment parts can lead to injuries to people, will be indicated in the manual by this sign



During the machine operation, the operator is protected by the centrifugation chamber closed door. The working cycle is only possible after the door has been closed and locked. The protection remains locked in closed position until the cycle is over.



DURING THE WORKING CYCLE, THE PROTECTION DOOR SHOULD NOT BE FORCED OPEN. IF, AT THE END OF THE CYCLE, THE DOOR REMAINS LOCKED, DO NOT FORCE THE OPENING AND CONTACT OUR SERVICE DEPARTMENT.

The compartment underneath the centrifugation chamber houses the control and power electric circuits and the arm rotation motor. This compartment is isolated from the operator by fixed bulkheads. The bulkheads are kept in position with screws that can only be removed with special wrenches supplied with the machine.

EMERGENCY COVER OPENING: In case of a black out, to unlock the cover, remove the left side panel, and using the unlock tool 56.67, supplied in the accessories kit, push the locking pin back to release the cover free.



THIS KEY SHOULD BE USED ONLY IN CASE OF POWER SUPPLY FAILURE, DURING THE CASTING OPERATION.

1.1.3 GROUNDING

This product is a Class 1 device which utilizes protective grounding to earth to ensure operator's safety.



PROTECTIVE EARTHING CONDUCTOR TERMINAL -This symbol indicates the point on the product to which the protective grounding conductor must be attached.



EARTH (GROUND) TERMINAL -This symbol is used to indicate a point which is connected to the PROTECTIVE EARTHING TERMINAL. The component installer/assembler must ensure that this point is connected to the PROTECTIVE EARTHING TERMINAL.



CHASSIS TERMINAL -This symbol indicates frame (chassis) connection, which is supplied as a point of convenience for performance purposes. This is not to be confused with the protective grounding point, and may not be used in place of it.





 

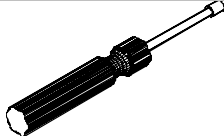

1.2 GENERAL INFORMATION

1.2.1 RECOMMENDED USE

EC-1, EC-1 Infrared and EC-2 are a centrifugal melting unit with medium frequency inductive heating, designed to melt all types of metals. The safety devices fitted on the machine make it safe and reliable in time.

1.2.2 SUPPLIED ACCESSORIES

Table 1: **Accessories EC-1, EC-1 INFRARED, EC-2**

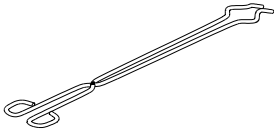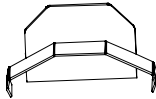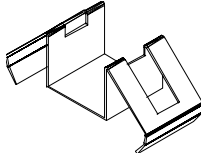1 pair of tongs for cylinder and crucible, Part Number: 4HVM-000-101-00 (Code 03.55.120.0001)	
1 cylinder spacer 25mm, Part Number: 2MAS-015-200-AN (Code 06.00.170.0035)	
4 cylinders saddles in various sizes <ul style="list-style-type: none"> • 30 mm, Part Number: 2DET-015-200-LT (Code 06.00.110.0049) • 48 mm, Part Number: 2DET-015-200-LN (Code 06.00.110.0048) • 65 mm, Part Number: 2DET-015-200-LU (Code 06.00.110.0047) • 80 mm, Part Number: 2DET-015-200-LS (Code 06.00.110.0046) 	
1 refractory crucible, Part Number: 2DET-015-000-KB (Code 03.40.180.0008) 1 graphite crucible, Part Number: 2DET-015-000-KC (Code 03.40.180.0006)	
4 feet for the centrifuge, (already installed) Part Number: 4AEC-000-023-00 (Code 03.40.060.0001)	
1 blue protection lens, (already installed) Part Number: 6VMT-000-007-00 (Code 01.10.998.0001)	
1 screwdriver for protection panels, Part Number: 4HVM-000-100-00 (Code 03.55.100.0001)	
1 unlock tool (Code 56.67)	

1.2.3 UNAUTHORISED USE

The EC-1, EC-1 Infrared and EC-2 melting unit has NOT been designed for melting alloys that are not used for odontotechnic purpose.

The crucibles from materials others than ceramics or graphite have not to be used.

The metal cannot undergo centrifugation melting if the doors are opened.

1.2.4 PERSONNEL TRAINING

The EC-1, EC-1 Infrared and EC-2 melting unit has been designed and built to be used by personnel qualified in odontotechnics; these persons are supposed to be perfectly acquainted with the work execution procedures and with the characteristics of the materials to be used.

An accurate reading of this manual and a short training under the supervision of qualified personnel is recommended.

1.2.5 SAFETY DEVICES

The machine is supplied complete with the devices required to guarantee the operator's safety:

1. Door locking during rotation.
2. No melting start if water is missing.
3. No melting start if the water temperature is too high.
4. No melting start if the coil does not rise.
5. No coil rises if the pressure is missing.
6. No coil rises if the position is not aligned with the crucible.
7. Red mushroom emergency stop on yellow background. It should be used:
 - 7.1. To avoid, as soon as they arise, dangers to people;
 - 7.2. To reduce, when they arise, damages to the machine or the on-going operation. USE MODERATELY.

1.2.6 NOISE LEVEL

The measure has been taken with the machine in the centrifugation phase, as this is the operation with the highest noise emission.

1. Phonometric measurement in compliance with UNI 9432.
2. Noise meter: Bruel & Kjaer 2218, with wad filter 1613 № 895445.
3. Weighting filter: Curve A.
4. Measuring system: The exposures are calculated starting from noise pressure measures and integrating for the time of exposure.
5. Estimated equivalent continuous noise level A in the working station is $L_{Aeq1}T_p = 68.7$

1.2.7 RESIDUAL DANGER AND EMERGENCY SITUATION



1. Avoid direct contacts with the melting coil during the heating phase (ELECTRIC HAZARD).
2. Avoid introducing metal objects inside the melting coil without the appropriate crucible (ELECTRIC AND THERMAL HAZARD).
3. Avoid direct contacts with the mechanical parts situated near the crucible; use supplied prongs and wear suitable gloves to manipulate crucibles and cylinders (THERMAL HAZARD).
4. Avoid any type of intervention on the machine before the machine has been disconnected from the electric supply.

Note: The above residual dangers are indicated on the machine by specific labels.

2. INFORMATION ON THE MACHINE OPERATION

2.1 TECHNICAL DESCRIPTION OF THE MACHINE

The EC-1 melting unit consists of a steel framework supporting the centrifugation tank, and a steel plate panelling closing the machine. On top of the machine, a door opens in a compasses movement to give access to the working compartment. This door is fitted with a safety lock.

The melting circuit, based on the current oscillation principle (105 kHz) in such a way as to create an alternate magnetic field, uses the new generation IGBT Transistors technology, which guarantees a better yield of the power circuit, lower consumption and excellent reliability in time.

This type of circuit offers two essential advantages:

Low current consumption.

The metal melting takes place from the inside toward the outside; this allows a more accurate reading and the risk of burning the metal is highly reduced.

Due to the magnetic field, the metal undergoes a continuous mixing, which returns all the alloy components to their position in the initial state; in the melting point, the metal starts "rising" and comes off the crucible, thus giving clear evidence of the melting.

Lastly, the machine is fitted with some automatic devices, for an easier work, such as:

Centrifugation time out preset on 40 seconds.

Pneumatic coil rise.

2.1.1 TECHNICAL DATA


Table 2: **Technical Data EC-1, EC-1 Infrared and EC-2**

SPECIFICATION	DESCRIPTION		
	EC-1	EC-1 Infrared	EC-2
Frequency	95÷110 kHz		
Weight	100 kg	100 kg	110 kg
Width	485 mm		
Depth (at base and max)	550 mm / 606 mm		
Height	1055 mm		
Electric power supply	230±10% Vac single phase - 50/60 Hz		
Maximum absorbed power	3.0 kW		
Air pressure for coil movement	Min. 4 bar – Max. 8 bar		
Argon pressure	1.0 bar		
Operating temperature	0°C - + 40°C		
Crucible maximum capacity	Au = 80 g - Cr/Co = 60 g		
Minimum melting capacity	Au = 10 g - Cr/Co = 10 g		
Admitted flask diameter	Min. 20 mm - Max. 100 mm whit the suitable flask available upon request		
Flask length	Min. 50 mm – Max. 100 mm whit the suitable spacer available upon request		


2.1.2. TECHNICAL REFERENCE REGULATIONS AND TEST PROCEDURES

This equipment is mass-manufactured by Ultraflex Power Technology, Inc. under the supervision of C.I.E. Dentalfarm, in compliance with technical and safety rules in force, as provided for by the 89/392 EEC Community Directive on machinery. The product is labeled CE and accompanied by a Declaration of Conformity. Careful inspection and full routine testing are carried out singularly on each machine.

According to International regulations, this unit has been classified as AEE (electric and electronic device, whose correct operation depends on electric currents and electromagnetic fields) and as a consequence, at the end of its lifetime, it can not be treated as normal waste material but it must be disposed separately, complying with the Directive 2002/96/CE.

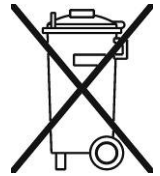

2.1.3 IDENTIFICATION OF THE CENTRIFUGATION TANK COMPONENTS

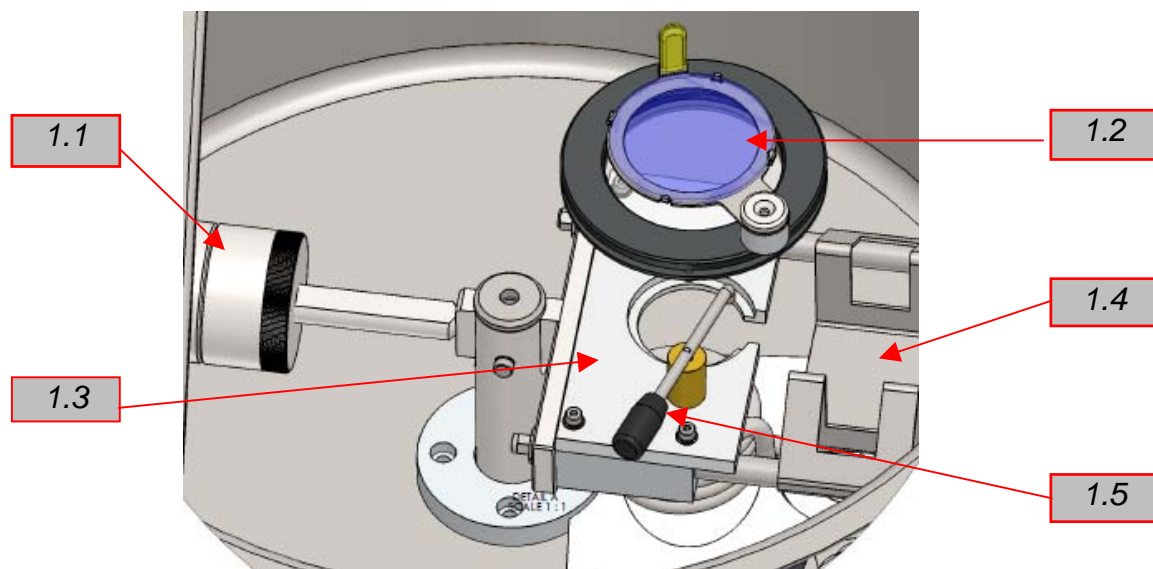


Pic. 1 - Centrifugation Tank Components

1.1	Counterweight	1.4	Supporting saddle (4 types)
1.2	Viewing window	1.5	Crucible lid locking lever
1.3	Crucible support		


2.2 CONTROLS AND OPERATION

2.2.1 FRONT PANEL OVERVIEW

The above drawing represents the control section of EC-1, EC-1 Infrared and EC-2. Therefore, if the model you have bought is not complete will all the modules, some sections will be missing on your instrument panel.

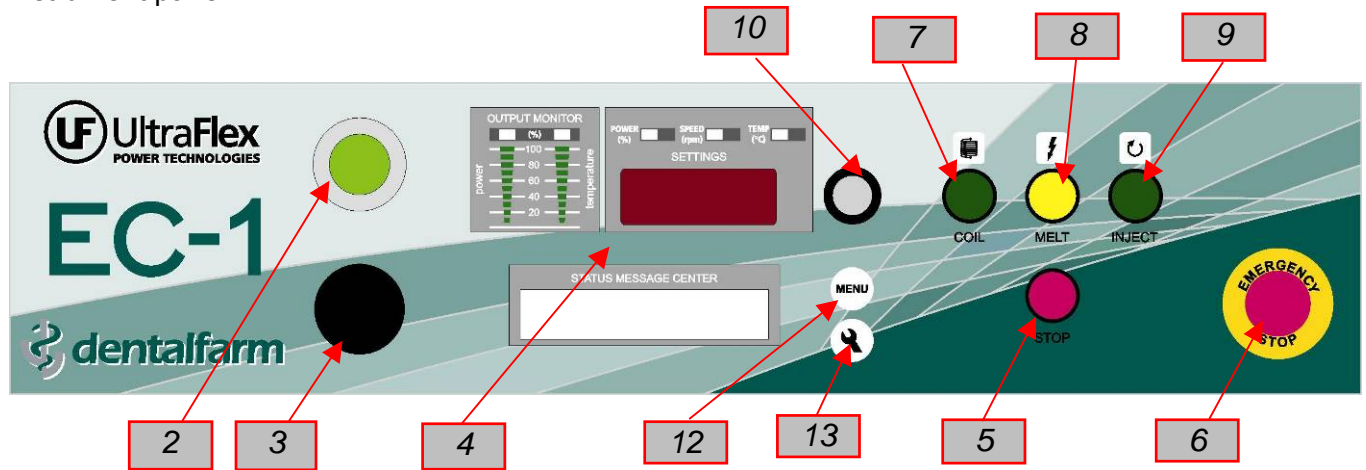

Pic. 2 - Front Panel EC-1, EC-1 Infrared

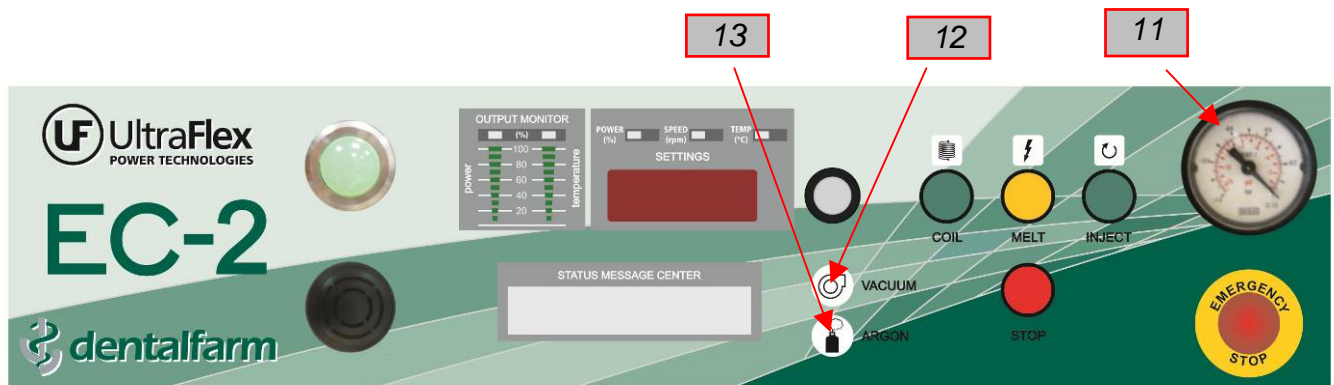

Pic. 3 - Front Panel EC-2



Pic. 4 – Main switch

Table 3: **Front panel EC-1, EC-1 INFRARED, EC-2**


No	Description
1	Power On Switch (Pic. 4)
2	Green Lamp – Power On Light (electric supply)
3	Alarm Buzzer
4	Control Panel
5	Power generator stop, centrifugation, and coil down button
6	Lamp lights – Mode “Ready”
	Lamp blinks – Alarm
7	Red mushroom emergency push-button, on yellow background. To be used: 1) to avoid dangers, when they arise, to the persons; 2) to reduce damages, when they arise, to the machine or on-going operations. USE WITH MODERATION
8	Induction coil rise and down button
9	Melting start button
10	Centrifugal start (Injection) button
11	Control Knob
12	Vacuum meter (Pic.3 - only for EC-2)
13	for EC-1 and EC-1 Infrared (Pic.2): “Menu” button button - Shortcut to the Setup Menu when pressed in “Ready” state for EC-2 (Pic.3): Vacuum and Devacuum button for EC-1 and EC-1 Infrared (Pic.2): “Service” button - Shortcut to Service Menu when pressed in “Ready” state for EC-2 (Pic.3): Argon gas button

2.2.2 CONTROL PANEL OVERVIEW

The unit is digitally controlled through a control panel located on the front panel of device. The control panel utilizes the latest microprocessor technology. The control panel is designed to display vital parameters and alpha-numeric messages providing intuitive and informative visual feedback. The users can also navigate through easy to use service, diagnostics and setup menus.

2.2.3 INDICATORS

The Control panel has the following indicators:

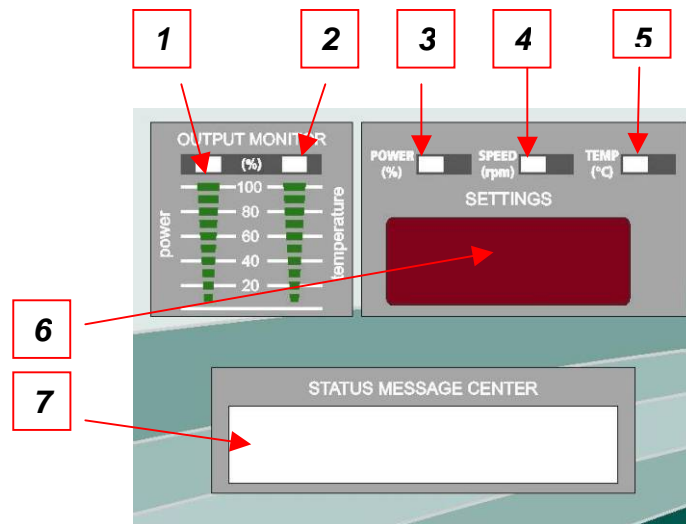


Pic. 5 - Control panel

Table 4: **Control and indicators Table**

No	Name/Function	Description	Indicator / Control
1	Output Power	BAR-GRAPH: The reading corresponds to the percentage of the measured power.	INDICATOR
2	Temperature reading	BAR-GRAPH: The reading corresponds to the percentage of the measured temperature.	INDICATOR
3	Output Power	The set point of Output Power: LED [AMBER] - Illuminated when display(6) is showing the output power	INDICATOR
4	Speed	Time: LED [AMBER]- Illuminated when display(6) is showing centrifugal speed, [RPM]	INDICATOR
5	Temp: LED [AMBER]	Temp: LED [AMBER]- Illuminated when display(6) is showing current temperature	INDICATOR
6	Segment LED indicators showing Output Power, Speed or Temp	Four red 7 segment LED indicators showing Output Power, Centrifugal Speed or Temp depends on items 3, 4 and 5	INDICATOR
7	Alphanumeric LCD display	Alphanumeric LCD display (20 characters / 2 rows) for displaying measured parameters, status messages, fault messages and menu screens.	INDICATOR

2.2.4 OUTPUT REGULATION AND STATUS MESSAGES

The following diagram describes a typical LCD display screen with message types and locations on the screen.

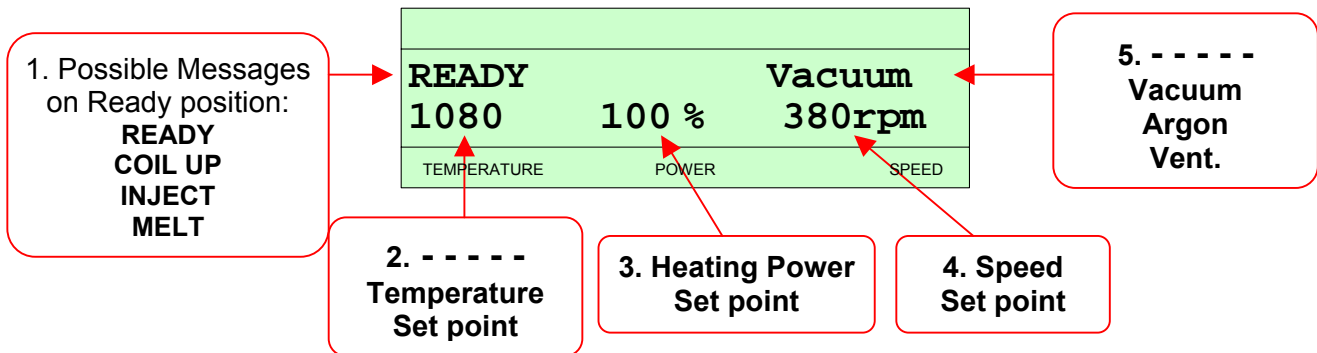

Pic. 6 - LCD display functions

Table 5: Control Modes and Messages Table

No	Name/Function	Description	Indicator/Control
1	Status Messages	Shows the current status of the system when in operational mode: READY – When there are no faults and the power supply is ready to be turned on; COIL UP – After pushing button COIL. If there are no faults, coil goes up; MELT – After pushing button MELT. If there are no faults, inverter starts; INJECT – After pushing button INJECT. If there are no faults, coil goes down and centrifugal motor starts.	INDICATOR
2	for EC-1: - - - - - for EC-1 Infr., EC-2: Temperature set point	Temperature. The set point of temperature regulator can be adjusted by rotating the Control Knob while the Amber “Temp °C” LED is illuminated. Temp range – The Temp value can be adjusted from 750° to 2000° in steps of 1°C.	INDICATOR
3	Current Output Power	The Output power can be adjusted by rotating the Control Knob while the Amber “Output, %” LED is illuminated. Power range – The Power value can be adjusted from 10% to 100% in steps of 1%.	INDICATOR
4	Speed	The Centrifugal Speed can be adjusted by rotating the Control Knob while the Amber “Speed rpm” LED is illuminated. Speed range – The Speed value can be adjusted from 10 to 500 trn/min in steps of 1 trn.	INDICATOR

5	<u>for EC-1, EC-1 Infr.</u> - - - - - <u>for EC-2:</u> Regulating flow Vacuum, Devacuum or Gas Argon	Vacuum and Gas Argon Control: <u>for EC-1, EC-1 Infrared:</u> Gas Argon and Vacuum Control are not provided. <u>for EC-2:</u> VACUUM – After pushing button VACUUM, vacuum pump starts; DEVACUUM – After pushing and hold for 1.5 min. button VACUUM, the pressure in the chamber was recovering; ARGON – After pushing button ARGON, the chamber starts to be filled with argon gas; TIME OUT VACUUM – Time Out for Vacuum is 1.0 min.; TIME OUT DEVACUUM – Time Out for Devacuum is 10 sec. TIME OUT ARGON – Time Out for gas Argon is 40 sec.	INDICATOR
---	--	---	-----------

2.2.5 MENUS AND NAVIGATION


2.2.5.1 General Navigation Rules

Rotate Control Knob Clockwise or Counterclockwise to scroll through the menus, change values or toggles between 2 Melt Screens. Press Control Knob to select menu or accept the changes.

When scrolling through service menus:

- Pushing the Control Knob selects the parameter;
- Selecting the Exit option will return to the previous menu;
- Start and Stop buttons are disabled when in Service menus.


2.2.5.2 Main Menu

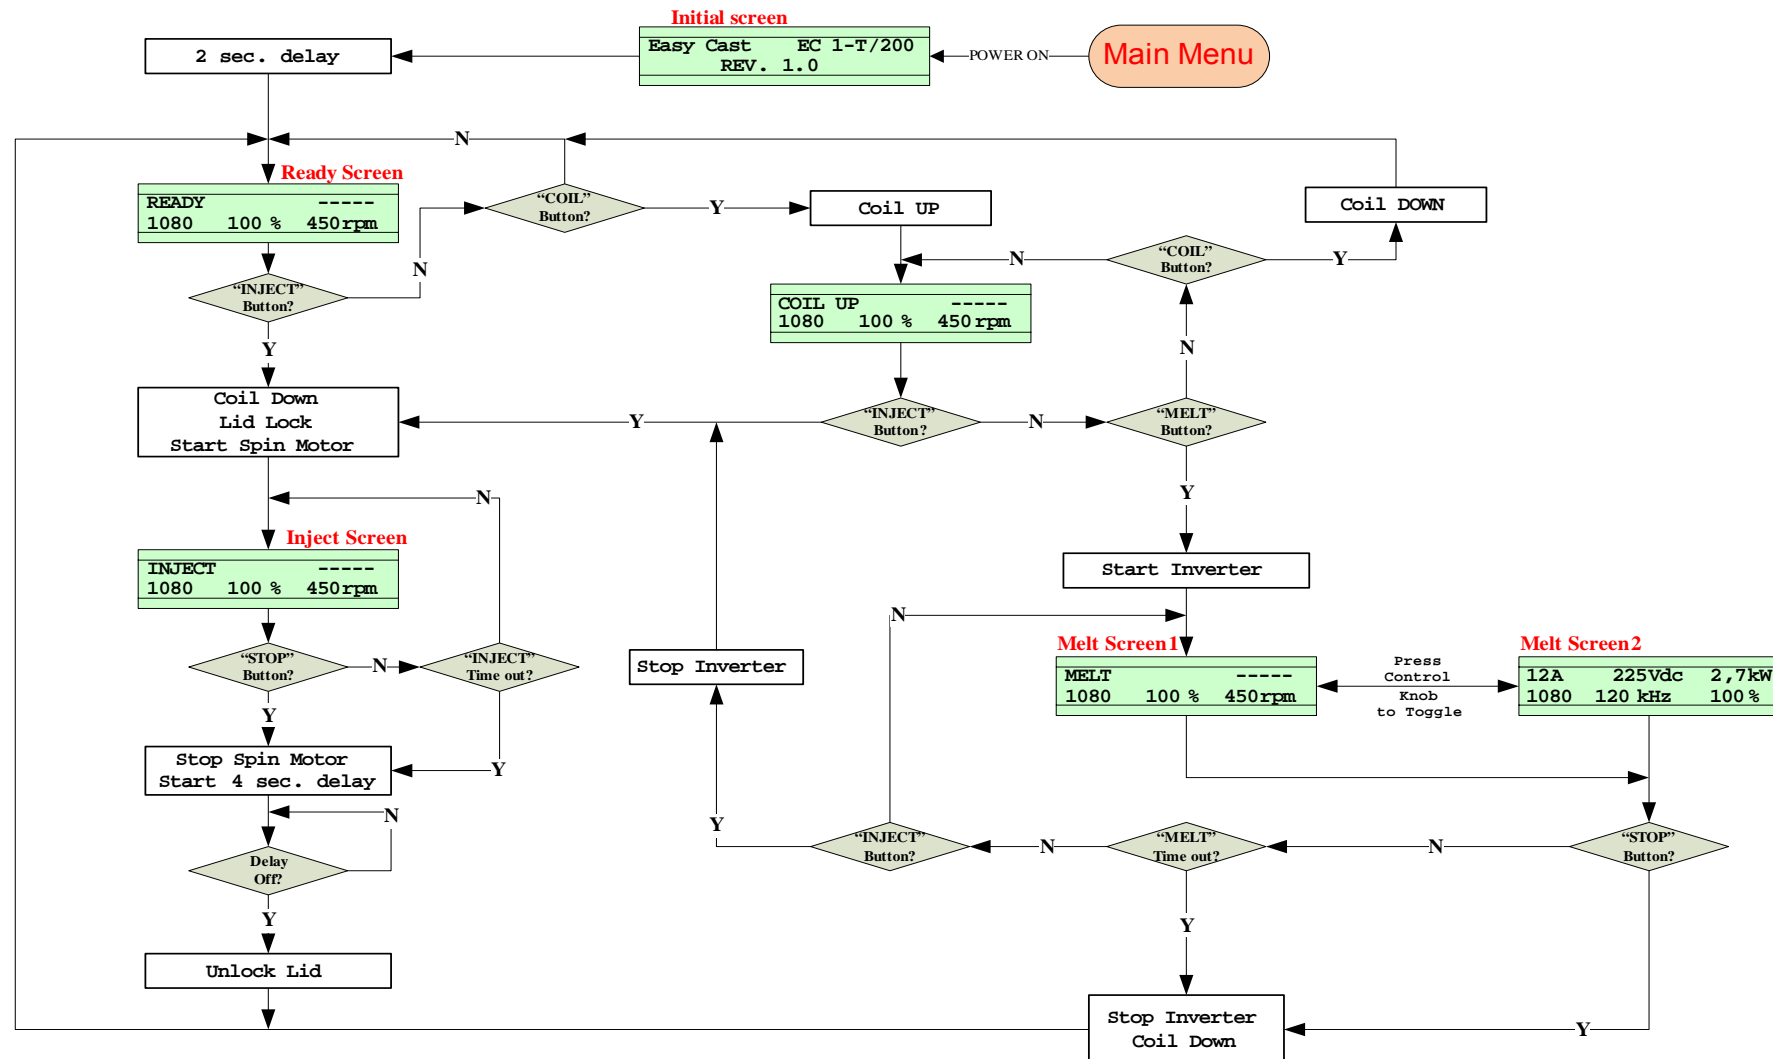

Pic. 7 - Main Menu Flow Chart Diagram

2.2.5.3 SUB Menu

SUB Menu is accessible from Main Menu in “Ready” state, by pressing and holding Control knob for 2 sec. It is shown on Pic. 8. The edited parameters (in blue) will be highlighted when selected for editing.

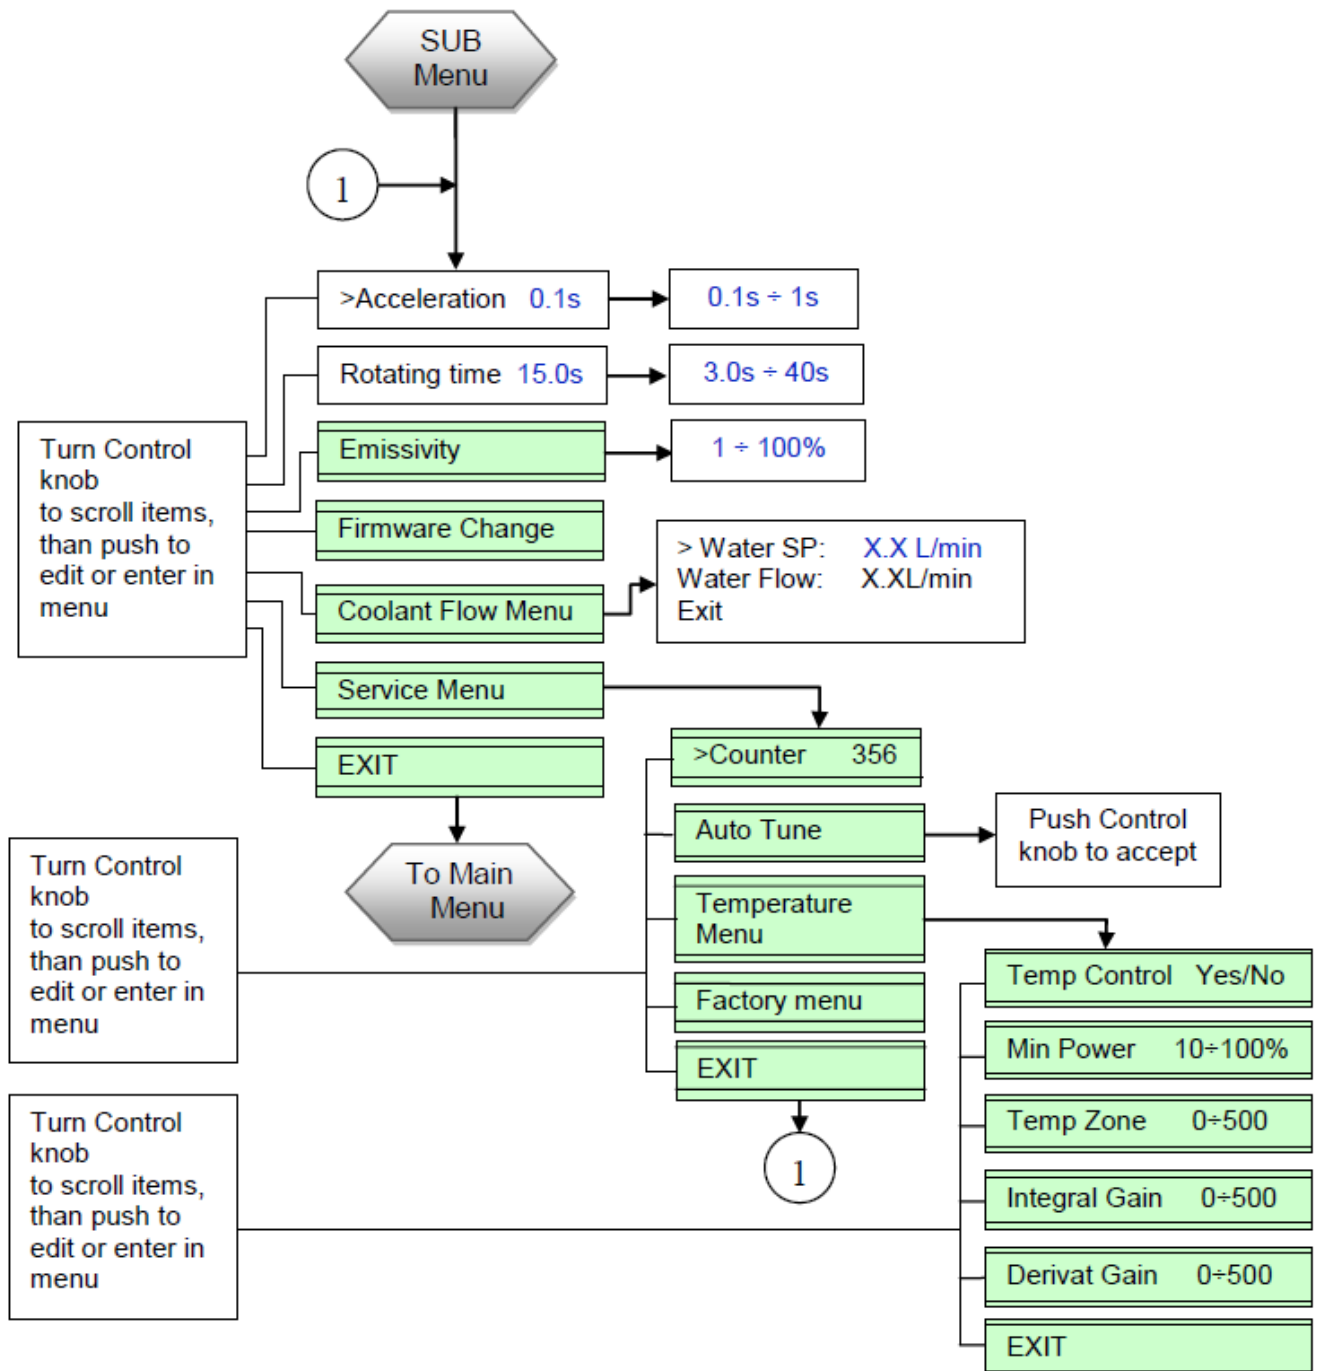


Pic. 8 - SUB Menu Structure

2.2.5.4 SUB Menu Options


1. **Acceleration** – defines the acceleration time of the motor from 0 to the preset speed.
2. **Rotating Time** – set rotating time for centrifuge in seconds.
3. **Emissivity** – emissivity coefficient for certain alloy.
4. **Firmware Change** – Service menu for updating the software control panel.
5. **Coolant Flow Menu** – set point and current indication of water Flow menu.
6. **Service Menu:**
 - 6.1 **Counter** – accumulation of casting cycles;
 - 6.2 **Auto Tune** – automatically lock the resonant frequency of tank circuit;
 - 6.3 **Temperature Menu:**
 - 6.3.1 **Temperature Control** – switching on and off temperature regulator, all other parameters are valid the regulator is switched On and are not valid when it is Off;
 - 6.3.2 **Min Power** – minimum permissible power that can be fed to the output;
The parameters 6.3.3, 6.3.4 and 6.3.5 are parameters of PID Control law;
 - 6.3.3 **Temp Zone** – Zone for proportional part of PID control law of the regulating;
 - 6.3.4 **Integral Gain** – integral gain of PID control law;
 - 6.3.5 **Derivat Gain** – derivat gain of PID control law;
 - 6.3.6 **EXIT** – returning to SUB Menu.
 - 6.4 **Factory Menu**– Only for factory staff.
 - 6.5 **EXIT** – Returning to Coolant Flow Menu.
7. **EXIT – Exit** – Returning to Main Menu.

Every ERROR messages that appear during normal operation of the device are shown in the flowchart in Pic 9.

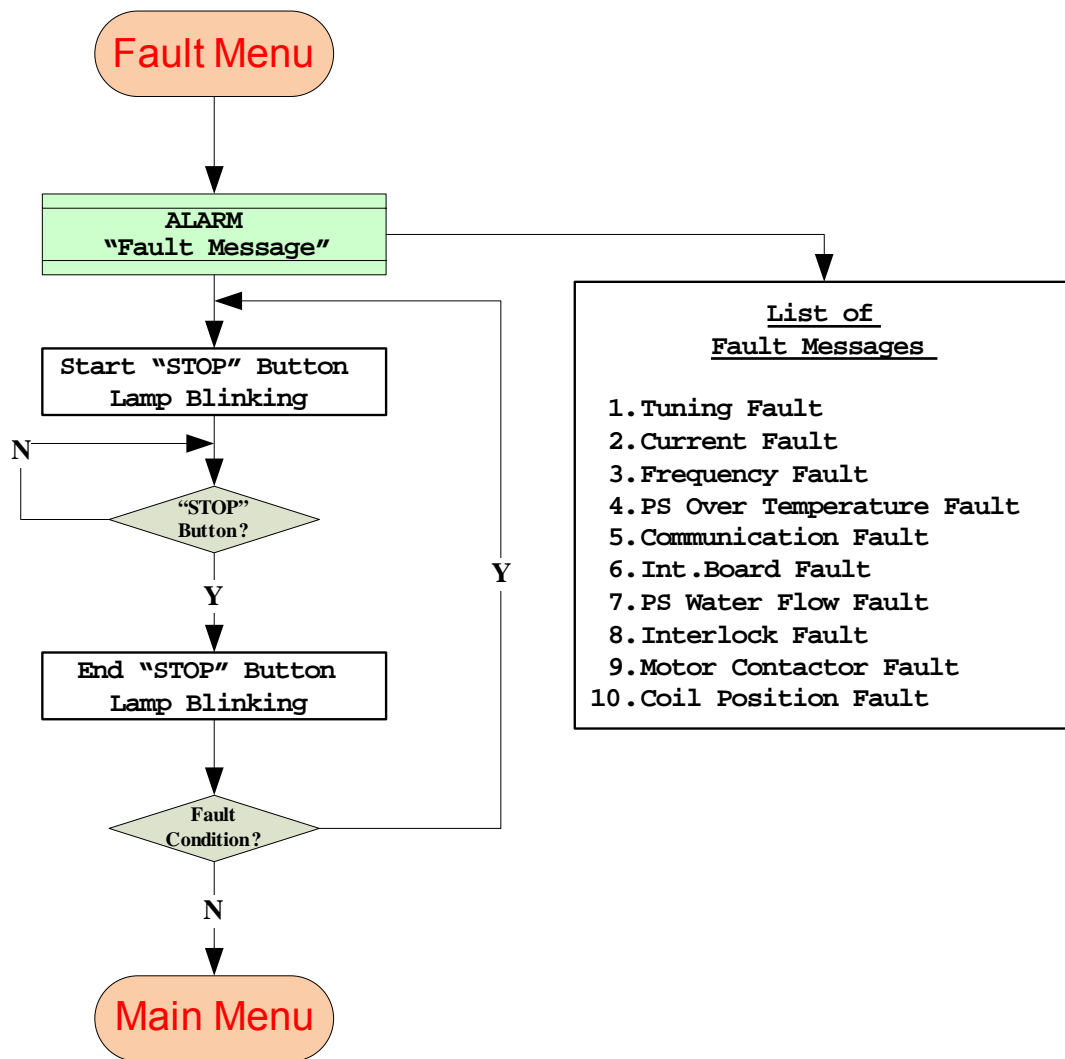

Pic. 9 - Fault Menu Flow chart Diagram

Every WARNING messages that appear during normal operation of the device are shown in the flowchart in Pic.10.

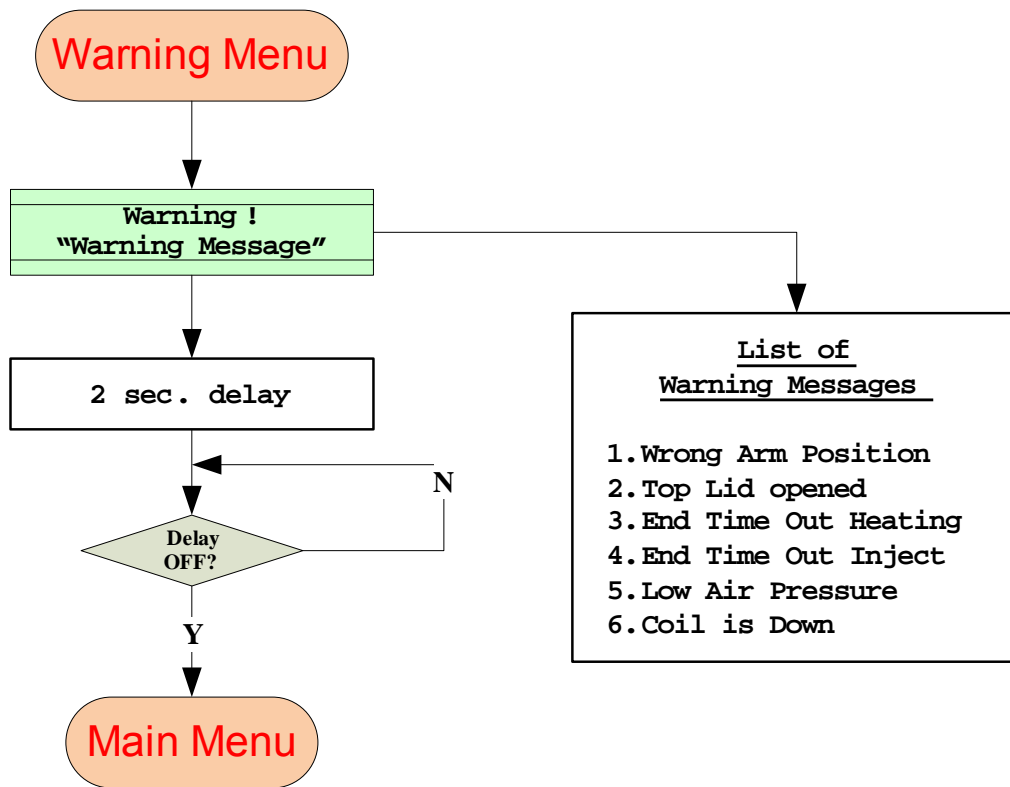

Pic. 10 - Warning Menu Flow chart Diagram

2.2.6 TUNING AND TROUBLESHOOTING

2.2.6.1 LOAD TUNING GUIDE

Because of fixed tank circuit and load device is factory tuned and does not need additional load tuning.

2.2.6.2 ALARMS, FAULTS AND WARNINGS

Table 6: **Alarms, Warnings (W) and Fault (F) Messages**

Fault Description	W F	Condition	Cause	Advice
Wrong Arm Position	W	Arm is not in zero position	You tried to move up the coil, while the arm was not positioned correctly	Adjust the arm in zero position
Top Lid Opened	W	Top Lid Opened	You tried to cast with open cover	Close the lid and try again
End Time Out heating	W	Melting has reached 3 minutes	Expired time out for melt before manual stop	---
End Time Inject	W	Casting has reached 40 seconds	Expired time out for casting before manual stop	---
Low Air pressure	W	There pressure is below for 4 bars	You tried to move the coil without enough air pressure	Increase input air pressure
Coil Is Down	W	You tried to melt with coil down	If you press MELT button when the coil is down	Move up the coil
Tuning Fault	F	Primary V & I out of phase	Can't find resonant frequency	Check resonant loop connections - load coil, tank capacitors. transformer taps
Current Fault	F	I primary > I Max	Output current exceeds the limit	Possible FET/IGBT failure in the Power supply. Contact our Service department
Frequency Fault	F	$F < F_{min}$ or $F > F_{max}$	Frequency goes out of the pre-programmed range during Heat On	Check resonant loop values, tank capacitors or control board. Check load coil for shorted turns.
PS Over Temperature	F	$T^{\circ}\text{heat sink} > 45^{\circ}\text{C}$	The heat sink of the power supply exceeds the max allowed T°	Check fans, blockages of the vents or fan filters, cooling water temperature or water filters.
Communication Fault	F	Communication Error Between Panel and Control Board	No acknowledgment is received after the last command	Check cables and RS connectors between boards
Int. Board Fault	F	No connection with Interface board	No acknowledgment is received after the last command	Check cables and RS connectors between boards
PS Water Flow Fault	F	Water Flow < 2 l/min (0.5GPM)	Restricted or no water flow	Check cooling water flow rate and water pressure. Check hoses and external water filter for blockages. Check flow switch.
Interlock Fault	F	The lock on the lid is not working	Interlock does not execute commands	Check Interlock and Interlock sensor
Motor Contactor (KM2) Fault	F	Motor Contactor is welded	Contactor damage	Change contactor
Coil Position Fault	F	Coil is not moving as expected	When the coil does not execute commands	Contact our Service department

2.3 INSTALLATION AND SET-UP

2.3.1 UNPACKING THE MACHINE


1. When it is shipped, the machine is fastened on a wooden pallet by means of brackets, in order to guarantee a safe transport. Use a Phillips screwdriver to remove screws and release the machine from the pallet before installing it.

CAUTION: use all necessary caution and keep the machine in an upright position.

2. Check that the machine has not suffered any damage during transportation. Should you find damages, report them to the carrier and send a written communication to both the manufacturer and the dealer immediately.

3. Pick up accessories and carefully remove all the packing material

4. Open the protection door and carefully release the centrifugal arm.

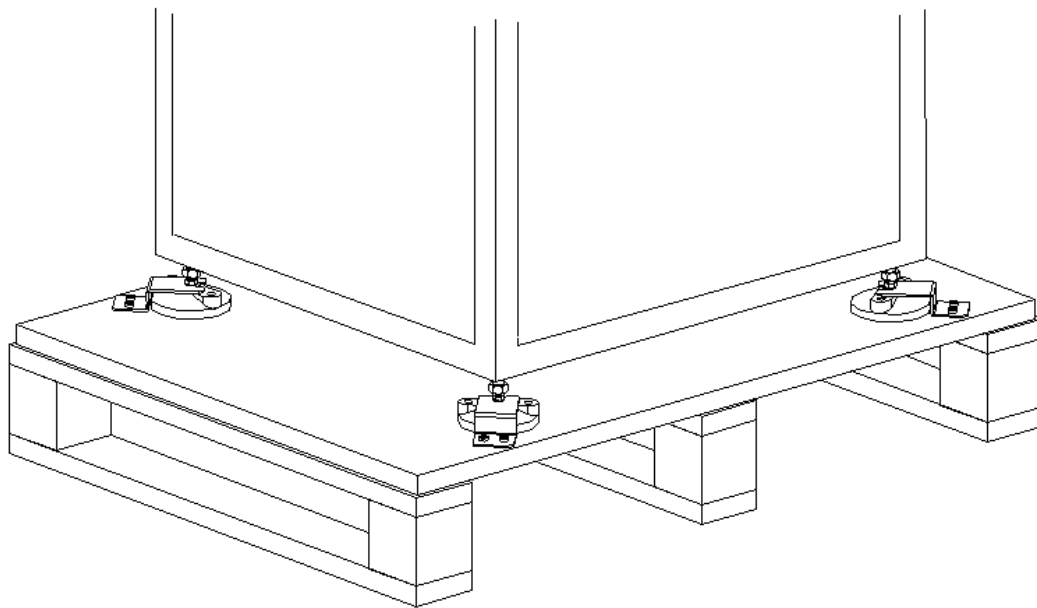

Pic. 11 – Fixing brackets




WHEN STARTING UP THE MACHINE, THE CENTRIFUGATION TANK MUST BE TOTALLY FREE FROM ACCESSORIES AND PACKING MATE.

2.3.2 POSITIONING IN THE ROOM

The machine must be installed in a properly ventilated room for a correct scavenging of fumes and steams that build up during the melting process. In order to reduce possible risks in handling hot materials, it is recommended to install the machine near the heating furnace and the service sink.

1. **PLACE THE MACHINE ON A PERFECTLY FLAT SURFACE.**
2. When the machine is installed, check **THAT IT IS PERFECTLY STABLE AND HORIZONTAL.** A total stability is absolutely essential during the centrifugation arm rotation. If necessary, adjust the machine position with the feet supplied with the machine, to adapt it to the floor. **DO NOT INSERT ANY SHIM BETWEEN THE FEET AND THE FLOOR.** With a level gauge, check that the upper surface is perfectly flat.

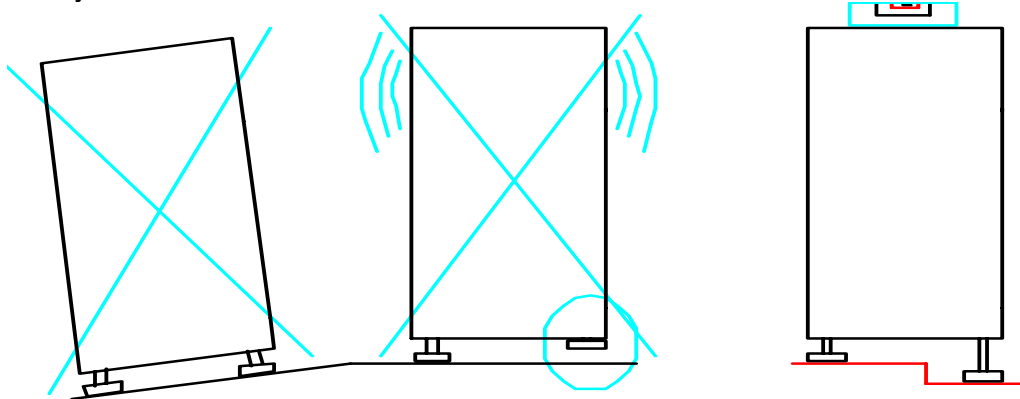

Pic. 12 – Perfect stability

2.3.3 MAIN CONNECTIONS

Make sure the power supply voltage is the same as the voltage indicated on the identification plate on the machine rear panel. Check that the available power is sufficient (see table: Technical data).

1. **USE AN AC MAINS OUTLET, type 25 A, 250 VAC, SINGLE PHASE**

Using an AC current supply other than the specified supply may damage the machine.



Remember the machine must be grounded. Check the efficiency of your electric supply installation.

2. Connect the compressed air circuit with the appropriate connection (see Pic. 11). For a proper operation, the pressure should be between 4 and 8 bars.

Should it be lower red light blinks (Pic.2 - 5) and the LCD-display (Pic.4 - 7) shows an error: Air pressure fault.

2.3.4 INBUILT COOLING CIRCUIT


The cooling system is built in. A pressure gauge controls the water flow and locks the machine operation in case of low pressure.

To fill in the cooling circuit, proceed as follows:

1. Unscrew the cap of the round fitting, marked with "Water In", located on the rear panel of the machine. - Cap fitting 1/2".
2. Open the "overflow" fitting – Pic. 10-2.1 bellow. Put a water vessel under this fitting – if you fill the tank too much water will start overflowing from there.

This outlet must always be open when you fill in the water tank and closed after that!

3. Start pouring water inside the tank using a funnel.
4. Fill in the tank with approximately 18 liters of demineralised water until overflow-overflow fitting.
5. Monitor water gauge, located at the bottom of the rear panel!
6. Check the water level every 12 months.

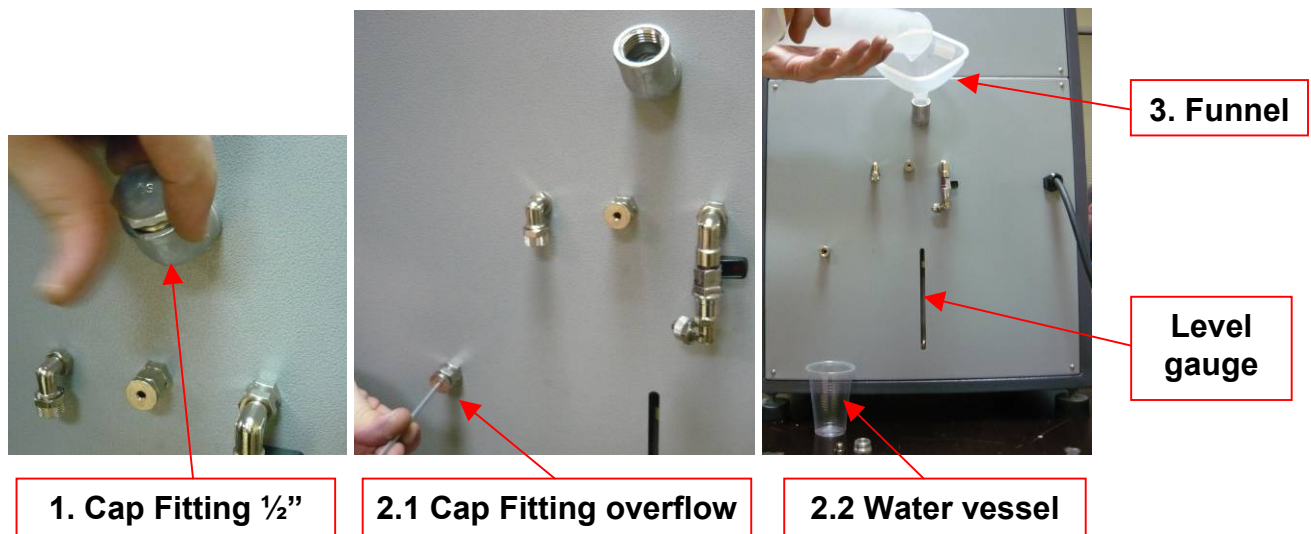

Pic. 13 – Rear Panel



ATTENTION!
DO NOT FILL THE WATER TANK WITH WATER PRESSURE!



A completely full tank allows carrying out 16 consecutive melting operations. If the laboratory needs to carry out more melting operations, replace the water in the tank or fit the machine with an external tank.

To empty the cooling circuit, proceed as follows:

1. Connect the L fitting, situated at the rear of the melting machine, marked with "WATER OUTLET" with a suitable pipe.
2. Open the tap and insert other end of the pipe into sewage or a container of about 20 liters.
3. Start the machine with the main switch ON (Pic.2-1); the machine starts draining water.

2.3.5 PRELIMINARY CONTROLS

1. Check that the air circuit have been connected (there must be no leaks, bleeds, etc.) and the power supply is on.
2. Check that the centrifugation chamber is free from any accessory.
3. Check that the emergency push-button (Pic.2-6) is disconnected; to unlock the emergency, rotate the push-button in the direction of the arrow.
4. IN CASE OF FAILURE - If a malfunction is observed during the operation, or if the indicators give wrong information, immediately disconnect the machine and contact the dealer or an authorised service centre.
5. EMERGENCY STOP CONTROL - This mushroom type push-button is red on yellow background. It should be used:
 - to avoid, danger to operator;
 - to reduce, damages to the machine or to on-going operations.

USE WITH MODERATION!

2.4 OPERATING INSTRUCTIONS

2.4.1 CRUCIBLES

We strongly recommend following strictly the following useful hints in order to obtain the best results from your casting machine.

Ceramic crucibles: RT101, RT100 and RT104 (packs of 6 pcs.).

RT101: Standard crucible, standard mixture, recommended for casting non-precious and Cr-Co alloys.

RT100: Ceramic crucible with lining in silicon nitride providing considerably longer life of the crucible. Especially recommended for non-precious alloys for ceramic. Top performance is nevertheless assured when using any other non-precious alloy.

RT104: Ceramic crucible with lining in zirconia, assuring highest flowing of metal. Particularly recommended for palladium alloys.

Note: The first two above illustrated crucibles have to be pre-heated for at least 5-10 minutes before use, usually in the same furnace where the casting rings are heated; do not forget to remove the slags left inside the crucible. No vitrification required.

Crucibles with graphite lining.

RT102: Plumbago crucible, suitable to cast all those precious alloys which can not be contaminated by this material – NO PALLADIUM (pack of 6 pcs.).

RT103: (single pack) Crucible in sintered graphite suitable to cast both the palladium alloys and any precious alloys. The casting result of precious alloys is particularly improved. During the first use, take care to heat slowly the crucible: set the casting power rating at the lowest value (press key 10 of ill. 2 until only one the multifunction led indicators keeps lit (A, ill. 2)) during the metal heating process so that too much difference in temperature never occurs between the heated metal and the crucible.

Note: The introduction of pieces which, due to their shape and/or dimension get stuck between the crucible walls, may cause the crucible to break. During the heating process, these pieces will expand and exert a strong pressure on the crucible walls thus causing them to crack.

2.4.2 MELTING AND CENTRIFUGATION PREPARATION

Before attempting to melt any type of alloy, refer to the technical data and processing data relative to the metals used, supplied by the alloys manufacturers.

Choose the type of crucible to be used according to the alloys chemical characteristics (see attached table for details).

Note: Always refer to the indications supplied by the alloy manufacturer.




Use a crucible in good working conditions. If necessary, replace the crucible with a new one to prevent it from breaking, which could damage the melting unit or produce bad melting.

1. Introduce the metal to be melted into the crucible;
2. Check that the metal reaches the bottom of the crucible and does not remain stuck at the top of the crucible;
3. Reuse of old alloy: Check with the alloy manufacturer if previously melted metal (in vacuum, argon or atmosphere) can be reused and if a percentage of new metal should be added. If this is possible, it is advised to eliminate all oxide traces (for example through sandblasting), and to cut it in appropriate portions to introduce it inside the crucible in such a way as to achieve the maximum contact between the various metal parts;
4. Prepare the cylinder following the instructions supplied by the coating supplier, depending on the technique used, i.e. free expansion or steel cylinder;



Choose the cylinder dimensions according to the free expansion technique or the steel cylinder. The dimensions must be suitable for the work to be carried out and to the melting unit cylinder saddles. Place the cylinder saddle on the corresponding supports on the centrifugal arm, choosing the most appropriate size for the cylinder dimensions.

5. Introduce the crucible into crucible support (1.3) and direct it toward the cylinder conical raiser.
6. Use the spacer supplied with the machine if the distance between the crucible support and the cylinder is over 10 mm.

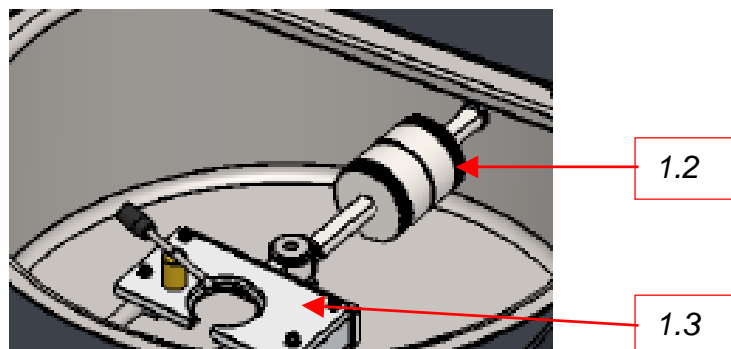

Pic. 14 – Balancing

7. Balance the weights: Unscrew the outer cylinder. Then, adjust the position of the counterweight, formed by the two knurled cylinders, to find the balance point. Turn again tight against the outer cylinder internal. The arm balancing has some tolerance; this allows storing the counterweight position on the numbered arm for each type of cylinder, notwithstanding the metal quantity.



The more accurate the set-up is, the lower are the machine vibrations.

The table below shows to operator the acceleration adjustment according to the metal used:

Adjustment acceleration according to the metal used.

METAL	ACCELERATION
Gold alloys	50%...75% of the maximum value
Palladium alloys, steel	75% ...90% of the maximum value

NOTE: Acceleration should be adjusted according to the weight and type of the material to be centrifuged (specific weight). In general, low accelerations for heavy weights and higher accelerations for lighter weights.

8. Remove the cylinder before preheating.

2.4.3 CENTRIFUGAL ARM AND CRUCIBLE PREPARATION



DURING THE MELTING OPERATION, HIGH TEMPERATURES ARE REACHED IN THE CRUCIBLE. HANDLE WITH CARE AND USE APPROPRIATE GLOVES AND TONGS.

1. Switch on the machine (and prepare it for work) turning the main switch (Pic. 2 - 1) to the up.



The green light "ON" (Pic.2 - 2) must light up.

2. Position the centrifuge arm by aligning the crucible axis with that of the heating coil.
3. Press the coil lifting push-button (Pic.2-7). As it rises, it will wind around the crucible. When the correct height is reached, the coil button lamp will turn on and the coil will lock in position for the melting operation.



**If the arm position is not correct, the coil does not rise.
if the correct height is not reached for the melting, you must verify the air pressure and check for any objects inside the chamber, that may block the rising movement of the heating coil.**

4. Position the crucible holding plate (Pic.1-1.3) to the rotation centre (above the coil).
5. Introduce the material to be melted into the crucible.
6. Introduce the crucible into its housing (Pic.1-1.3).
7. Lock the crucible with the lever (Pic.1-1.5) on the crucible side.

2.4.4 MELTING

1. Lower the cover.



During the melting process, a light gas formation is released from the metal mass. This can be dangerous only when the operator performs the melting process, willingly and consciously, with the lid open and directly breathes above the crucible.

2. Press the power push-button (Pic.2 - 8). The yellow light "ON" turns on and, after 4 or 5 seconds, the LED bar (Pic.2 - 4) shows the absorption; the absorption should be set according to the type and quantity of metal, by rotating the control knob (2.10) to the right to increase the melting power (and thus the melting speed).

3. While the metal is heating up, open the protection door and load the flask (which has been heated separately according to the procedures supplied by the manufacturer).



For a direct vision of the melting process, use the anti-UV screen on the lid opening or use appropriate safety glasses.

Once the metal is melt, the centrifugation process can be carried out (refer to section "CENTRIFUGATION").

2.4.5 VACUUM MELTING (only for EC-2)



In vacuum melting, it is recommended to preheat the cylinder in the furnace, at the required temperature, for a longer period of time with respect to the traditional melting systems.

1. Prepare the crucible in its support (Pic.1-1.3) with the metal to be melted. Introduce the preheated cylinder and close the protection cover.
2. Press the push-button (Pic.3-3.12) to start the air suction process from the centrifugation chamber. Once a negative pressure of - 0.8 bars is reached (see vacuummeter Pic.3-3.11), the pump can be switched off by pressing again the push-button (Pic.3-3.12).

2.4.6 INERT GAS INTRODUCTION (only for EC-2 with argon module)



Check that the gas bottle is connected, the valve is open and it is fitted with the appropriate pressure regulator.

When the protection cover is closed, press the push-button (Pic.3-3.12) so that the air in the centrifugation chamber is sucked. As soon as the vacuum meter shows a negative pressure of - 0.8 bars (Pic.3-3.11), the pump can be switched off. Press the push-button (Pic.3-3.13) to start the gas introduction process, checking the pressure inside the centrifugation chamber. When the vacuum meter (Pic.3-3.11) shows a pressure close to -0,2, interrupt the gas introduction and press the push-button (Pic.2-8) to start the metal heating process.

2.4.7 CENTRIFUGATION

1. Make sure that the flask is perfectly positioned. Close protection door and wait until the metal is completely melted.
2. Press push-button (Pic.2-9) to start the centrifugation process.
3. When the centrifugation is completed automatically, or if it is stopped with the push-button STOP (Pic.2-5), wait until the safety locking system unlocks the lid. Open the lid and remove the flask with the appropriate tongs.



For all materials, the centrifuge keeps the preset speed for about 40 seconds then it stops. The door remains locked for 5 seconds after the centrifugal motor has been stopped.

3. INFORMATION ON MAINTENANCE AND REPAIR

3.1 MAINTENANCE



BEFORE PERFORMING ANY KIND OF MAINTENANCE INTERVENTION, SWITCH OFF THE MACHINE AND DISCONNECT THE POWER SUPPLY.

Remove all accessories from the centrifugation chamber.

Carefully clean the inside of the centrifugation chamber, removing all coating fragments or metal residues. Clean with the upmost care the PTFE bushing where the coil slides, using the compressed air gun.

Every 6 months, check the cooling water tank and top up the water evaporated during the melting operation, through the filler cap situated at the rear of the machine.

3.2 ACCIDENT PREVENTION PROTECTIONS

1. During the melting operations, the operator is protected by the centrifugation chamber closing door. The working cycle is enabled only when the door is latched. The door remains locked in closed position until the centrifugation is completed.



**DURING THE WORKING CYCLE, DO NOT FORCE THE PROTECTION DOOR OPENING.
IF THE DOOR REMAINS LOCKED AFTER THE CYCLE IS COMPLETED, DO NOT FORCE IT OPEN AND CONTACT THE AUTHORISED ASSISTANCE SERVICE.**

2. The compartment underneath the centrifugation chamber houses the control and power electric circuits and the arm rotation motor. This compartment is isolated from the operator by side covers of frame. These protections are fitted in position by screws that can be removed with the special wrenches supplied with the machine.

3. **The LID can be opened with EMERGENCY KEY** (Table 1 - Code Number: 56.67): to be used only in case of blackout to unlock the safe latch that keeps the door closed. This key is kept by the person in charge of the laboratory, who assumes all responsibilities for possible damages to things or persons.



THIS KEY SHOULD BE USED ONLY IN CASE OF ELECTRIC SUPPLY FAILURE.



TO PREVENT DAMAGES TO PERSONS, DUE TO HIGH TEMPERATURES AND ELECTRIC SHOCKS, AVOID DIRECT CONTACT WITH THE MELTING COIL DURING THE HEATING PROCESS.

3.3 SERVICE

3.3.1 GENERAL

If for some reason the unit fails in the field it is advisable that the unit be serviced by the manufacturer or its authorized service representative. Should that happen, please contact us immediately (see contact information in Section 3.3.2).

Please have the following information about your unit available upon calling:

1. Unit Model and Revision (located on the label on the back of the unit).
2. Unit's Serial Number (located on the label on the back of the unit).
3. Line Voltage and frequency.
4. Detailed description of the problem encountered including – load, ambient temperature at the time of the failure.
5. Detailed description of the actions taken.
6. Approximate time in service.

If our technical staff is unable to help you over the phone, then a repair authorization number (RA#) will be issued for you. With this number enclosed in your return package you can ship the unit back for repair or request a service engineer to repair the unit on site.

3.3.2 SERVICE CONTACT INFORMATION

For technical service questions, please call:

Italy: +39 011 4346504 – Rest of Europe and Asia: +359 2 480 1900

USA and Canada: +1 631 467 6814

You may also fax your questions or request:

Italy: +39 011 4346366 – Rest of Europe and Asia: +359 2 480 1910


USA and Canada: +1 631 980 4065

Or e-mail us at: support@ultraflexpower.com - info@dentalfarm.it

You can also send your request through our www.ultraflexpower.com or www.dentalfarm.it

Note: Please, include your contact information so that you can be easily reached if necessary.

3.4 SPARE PARTS LIST

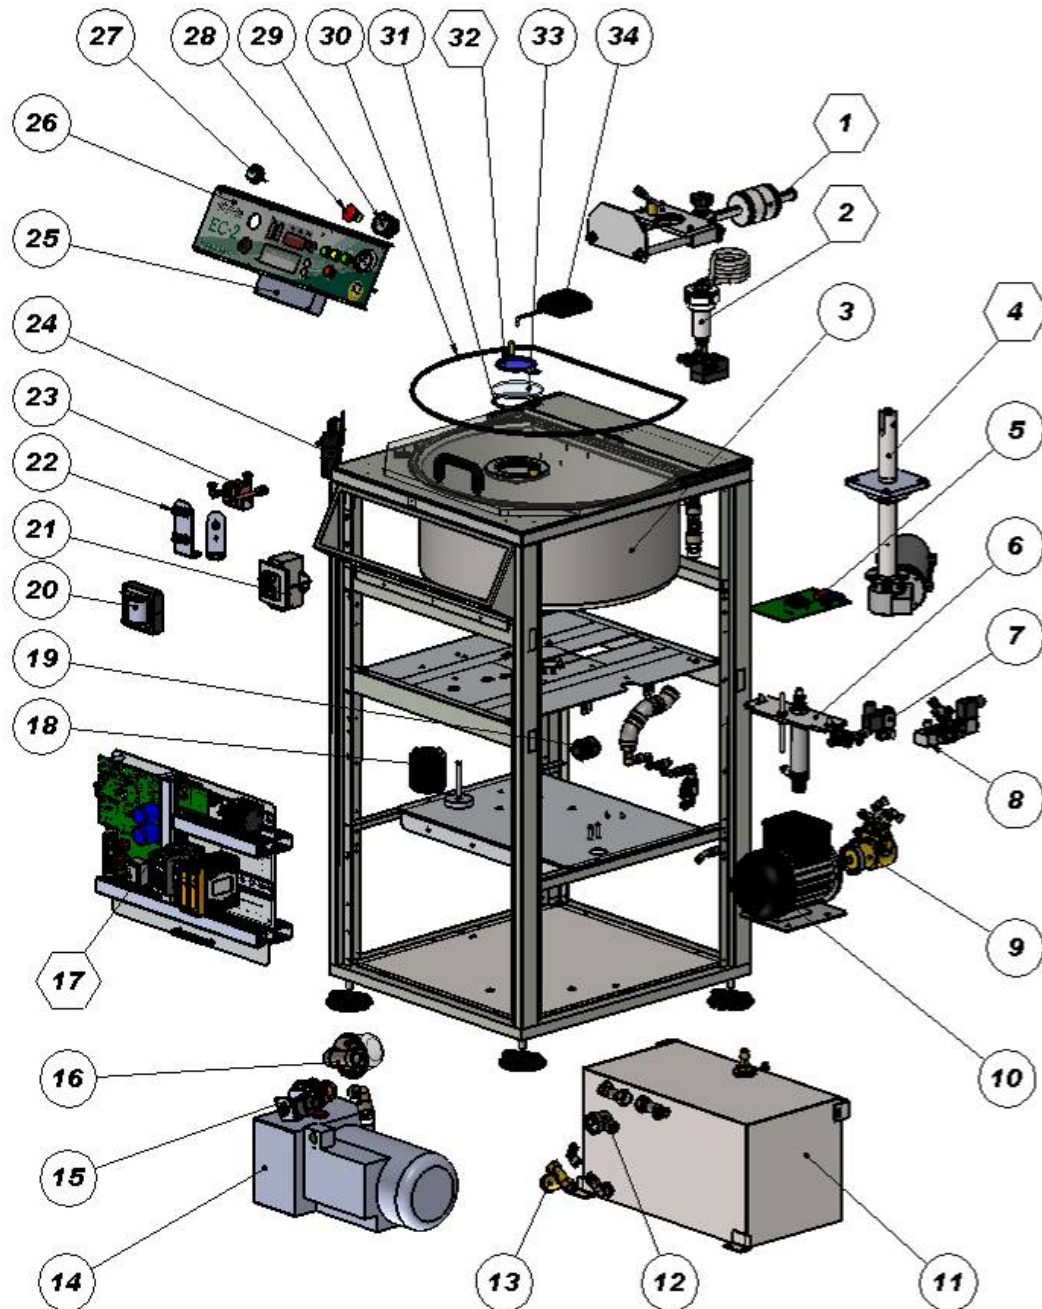


Pic. 14 – Spare parts list EC-1, EC-1 INFRARED and EC2

Table 7: **Spare parts list EC-1, EC-1 INFRARED and EC-2**

№	Description Coil Movement	Part Number		
		EC-1	EC-1 INFRARED	EC-2
1	Arm Assembly	2MAS-015-200-AG-A01-see below		
2	Coil Movement	see below		
3	Chamber	2DET-015-500-AA		
4	Rotation System	see below		
5	Temperature Control Board	1MOD-017-710-00		
6	Cylinder d 25mm/run 50mm	9VLM-000-025-00		


7	Connector for coil			
		N/A	N/A	9VLO-000-175-00
	Bobbin, gas argon, 24Vdc,8Vdc	N/A	N/A	available
	Magnetventil 2/2, 24Vdc	N/A	N/A	9VLM-000-007-00
8	Pressure switch	9VLM-000-024-00		
	Connector for coil	9VLO-000-151-00		
	Bobin, 24Vdc, 3.1W	9VLO-000-058-00		
	Noise Killer	9VLO-000-152-00		
	Magnetventile 5/2	9VLM-000-023-00		
9	Water Pump	9VLM-000-018-00		
10	Motor Water Pump	5MOT-000-003-00		
11	Water Tank for EC	2MAS-015-500-LM		
12	Flow sensor	9VLO-000-054-00		
13	Water filter	9VLO-000-125-00		
14	Vacuum Pump	N/A	N/A	9VLM-000-017-00
15	Bobbin, devacuum valve 24Vdc, 8Vdc	N/A	N/A	available
	Connector for coil	N/A	N/A	9VLO-000-175-00
	Magnetventile, 1/2	N/A	N/A	9VLM-000-026-00
16	Air filter for Vacuum pump	N/A	N/A	9VLM-000-019-00
17	Electronic assembly	2MAS-015-500-II-A1-see below		
18	Inductor, Choke	5MIT-471-001-00		
19	Feedthrough, PG 13	4KVT-000-026-00		
20	Transformer	2MAS-015-500-GF		
21	Fuse for 2 Fuses	3FFM-204-003-00		
	Decorative Frame for Fuse	3FFM-000-027-00		
22	Optic Sensor	1MOD-015-810-00		
23	Capacitor, Film CSP 120	3CFM-105-001-01		
24	Auto door lock	2MAS-015-500-PP		
25	Control panel Boards	1ASM-782-300-00		
26	Control Panel Plate and CP Folio	1ASM-015-500-OO	1ASM-015-500-OO	2MAS-015-510-OO
27	Lamp Assembly, Green Indication	1ASM-725-021-00		
28	Push Button, Emergency Stop Red	3SBM-000-026-00		
29	Vacuum meter	N/A	N/A	9VLM-000-027-00
30	Rubber	N/A	6VCC-000-092-00	6VCC-000-092-00
31	"O"-ring	N/A	6VCC-000-081-00	6VCC-000-081-00
32	Ceramic Glass d=90mm	2DET-017-500-MT		
	Glass Holder	2DET-017-200-PB		
	Plastic Cap	4EAC-000-019-00		
33	Ceramic glass	2DET-017-500-MT		
34	Fiber Optical Tube	2DET-017-500-MP		
	Preamplifier Box	2DET-017-500-MC		
	Optic Preamplifier Board	1MOD-017-720-00		

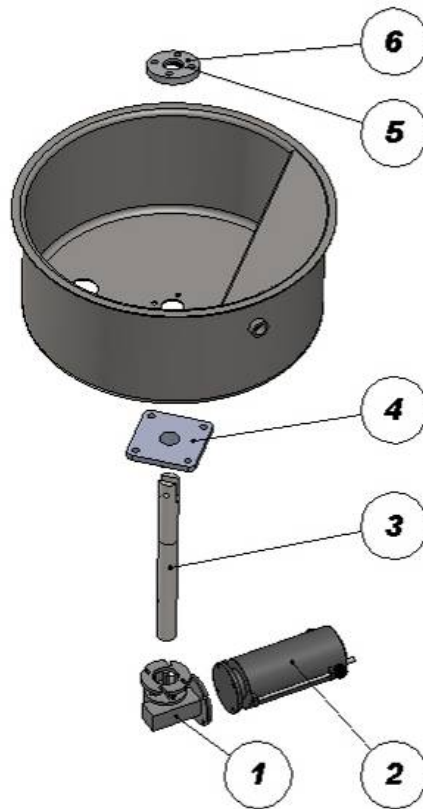

Pic. 15 – Rotating System

Table 8: ***Rotating System***


Nº	Description Rotate System	Part Number
1	Permanent magnets Motor	5MOT-000-004-00
2	Gearbox	5MOT-000-005-00
3	Metal Shaft	2DET-015-500-XA
4	Radial Bearing	4HBM-000-004-00
5	Holder Seal	2DET-015-200-OM
6	Radial Shaft seal d 30mm	4HVM-016-240-00

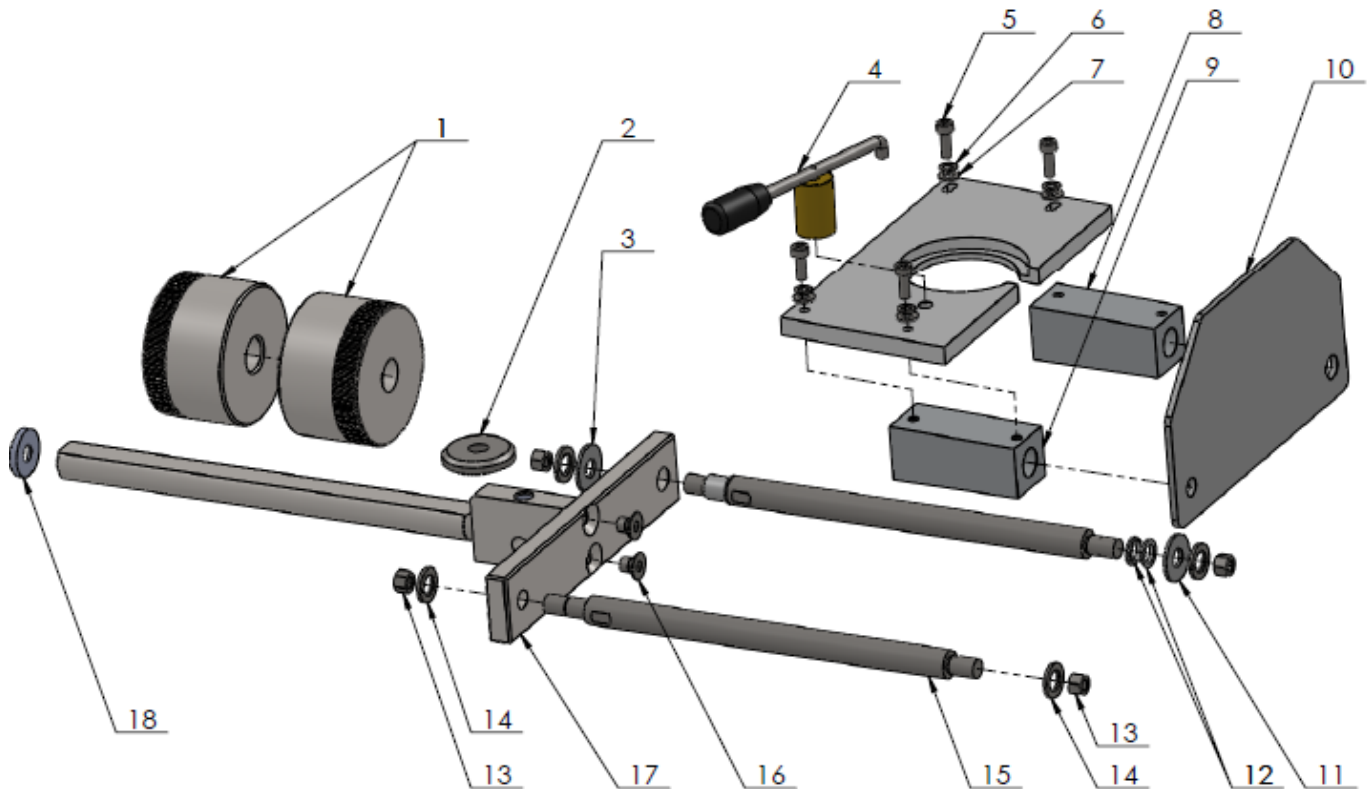

Pic. 16 – Centrifugal Arm 2MAS-015-200-AG-A01

Table 9: **Centrifugal Arm 2MAS-015-200-AG-A01**


No	Description Arm Assembly	Part Number
1	Balance load	2DET-015-200-NH
2	Bush arm	2DET-015-200-NJ
3	Insulating washer	2DET-015-200-PI
4	Holder crucible	2MAS-015-200-AH
5	Screw M4x12	DIN 912-A2
6	Spring washer A4	DIN 128-A2
7	Washer A4.3	DIN 125-A2
8	Slider arm right	2DET-015-200-NP
9	Slider arm left	2DET-015-200-NO
10	Base arm	2DET-015-200-LK-A01
11	Insulated washer	2DET-015-200-PI
12	Insulator arm 1	2DET-015-200-PJ
13	Nut M8	ISO 4034-A2
14	Spring washer A8	DIN 128-A2
15	Axis long	2DET-015-200-MR
16	Screw M6x20	DIN 7991-A2
17	Base balance load	2MAS-015-200-AS-A01
18	Limit balance load	2DET-015-200-NE

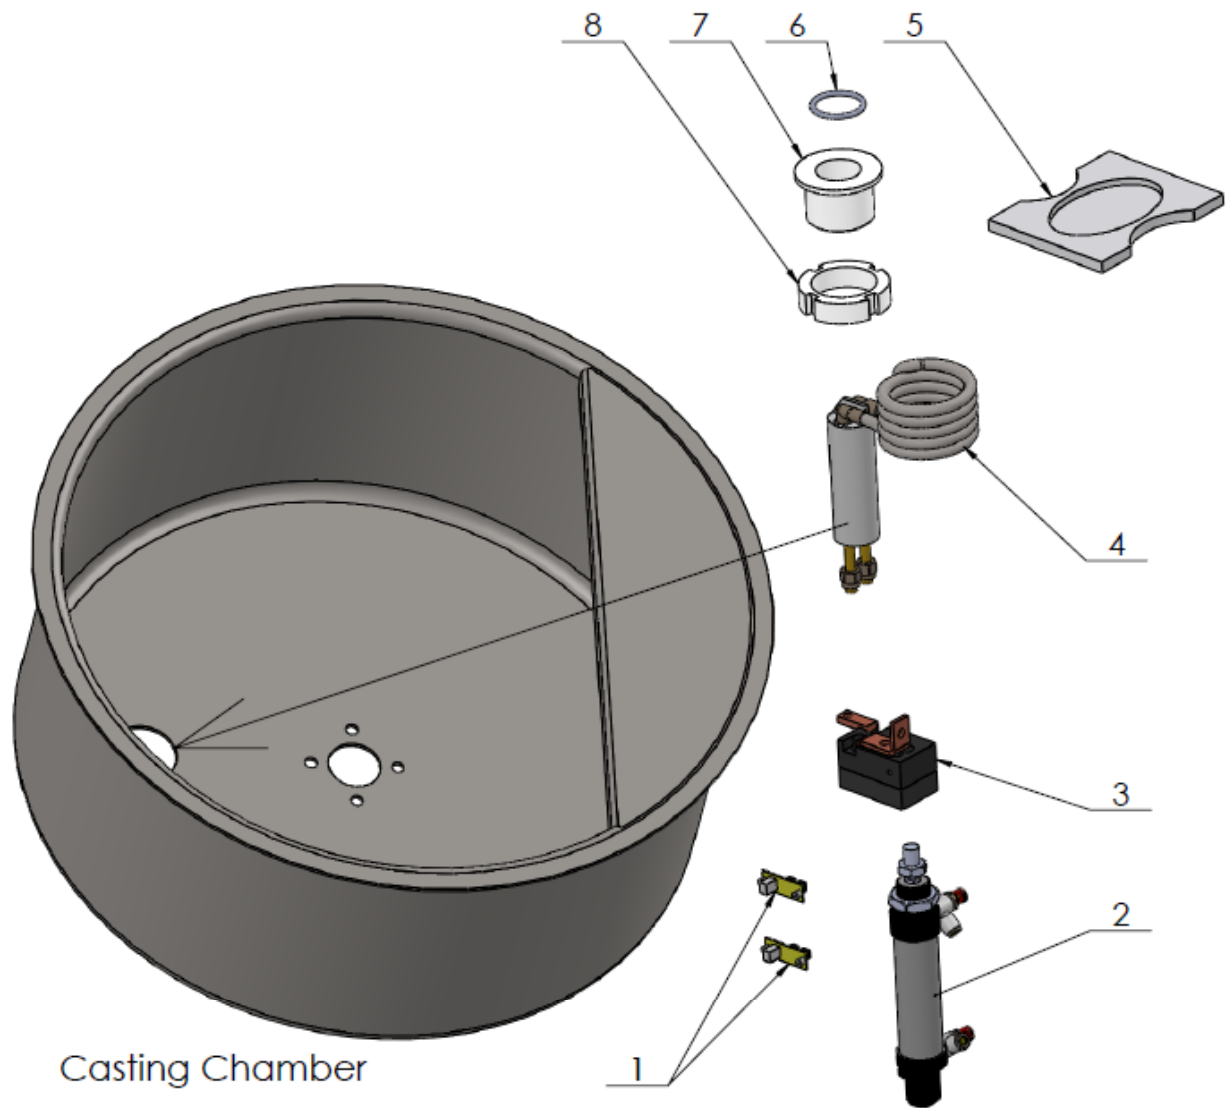

Coil Movement

Table 10: **Coil Movement**

No	Description Coil Movement	Part Number
1	End cylinder position sensor Board	1MOD-015-810-00
2	Pneumatic Cylinder	9VLM-000-025-00
3	Holder Coil assembly	2MAS-015-200-CP
4	Inductor	2MAS-015-200-AI
5	Ceramic Base	2DET-015-500-ZC
6	"O"-Ring, 29.75x3.53	6VCC-000-082-00
7	Moving Ring Coil	2DET-015-200-NQ
8	Nut Moving Ring Coil	2DET-015-200-NR

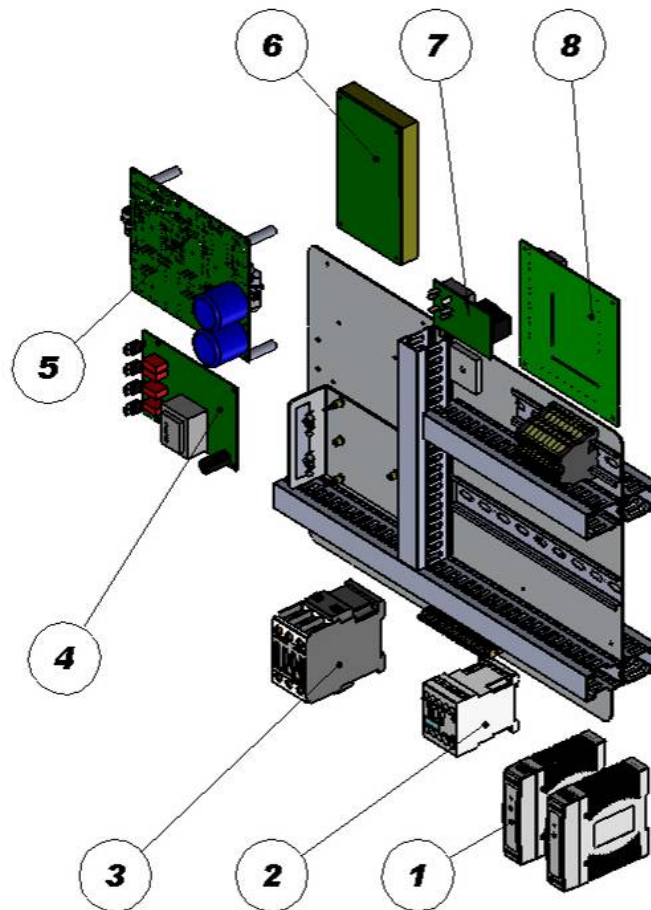

Pic. 17 – Electronic Assembly 2MAS-015-500-II-A1

Table 11: **Electronic Assembly**

Nº	Description Coil Movement	Part Number
1	Single Power Supply	3PSP-000-017-01
2	Contactor 3ph, 24Vdc+NC, 7A/400V	3FEM-000-010-00
3	Contactor 3ph, 230Vac, 25A/400V	3FEM-230-001-00
4	Motor Control Board	1MOD-015-500-00
5	Inverter board	1MOD-021-200-00
6	Relay Board	1MOD-017-850-00
7	JR Power Supply inrush limiter	1MOD-751-600-00
8	Interface Board	1MOD-769-100-00

NORTH and SOUTH AMERICA

ULTRAFLEX POWER TECHNOLOGIES, Inc.

154-1 Remington Blvd. – RONKONKOMA, NY 11779 – U.S.A.

TECHNICAL SERVICE : (+1) 631 467 6814

FAX : (+1) 631 980 4065

E-mail sales@ultraflexpower.com - support@ultraflexpower.com

Web site : www.ultraflexpower.com

EUROPE and ASIA

ULTRAFLEX POWER TECHNOLOGIES, Inc.

52 Tsvetan Lazarov Blvd. – 1582 SOFIA - BULGARIA

TECHNICAL SERVICE: (+359) 2 480 1900

FAX: (+359) 2 480 1910

E-mail eusales@ultraflex.com - support@ultraflexpower.com

Web site: www.ultraflexpower.com

ITALY

C.I.E. DENTAFARM s.r.l.

Via Susa, 9/a - 10138 TORINO - ITALY

AFTER-SALES SERVICE: (+39) 011/4346588

TECHNICAL SERVICE: (+39) 011/4346632

FAX: (+39) 011/ 4346366

E-mail info@dentalfarm.it

Web site: www.dentalfarm.it

Revision Table:

No	Ver.	Date	Remark	Create/Change by:
1	1.0	03.2013	Original for EC-1, EC-1 INFRARED and EC-2	L. Mihova – M. Bertotti